


DosFlash Utility SOP

version 1.1

1. Copy "DOS" folder to USB Disk. In the "DOS" folder, it includes three files: AFUDOS.exe, Flash.bat, Flash.ROM(for example).

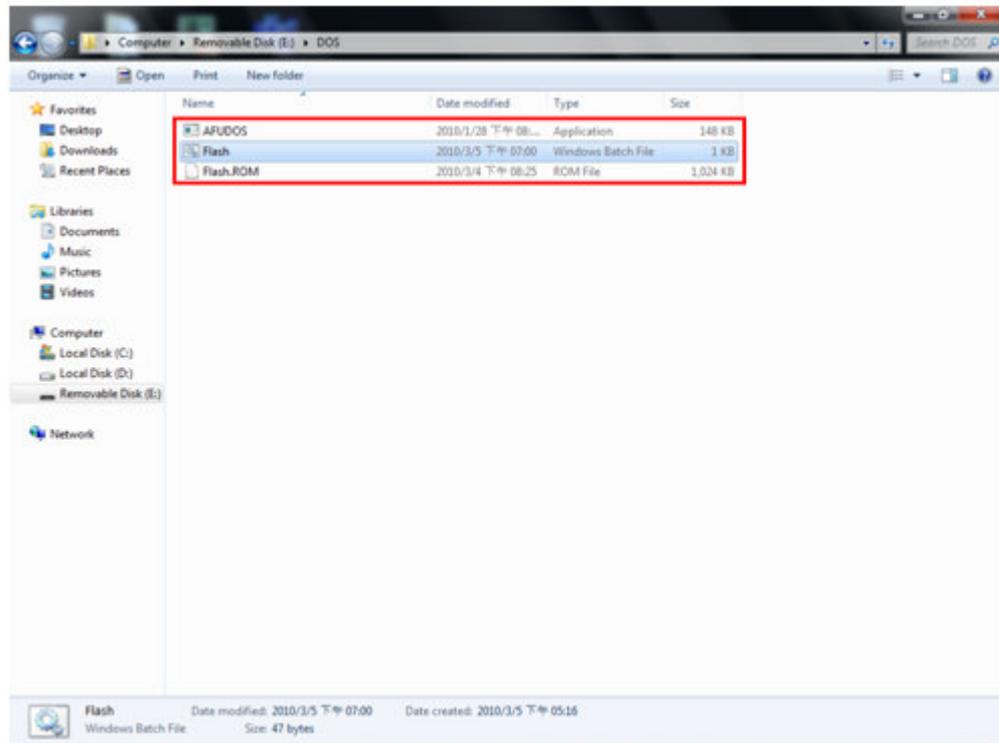

2. Enter DOS mode



3. Please key in "cd DOS" to enter "DOS" folder.




4. Please key in "Flash.bat" to execute flash procedure.



5. Process to flash BIOS

```
C:\>cd DOS
C:\DOS>FLASH.bat
-----+-----
|                               |
|             AMI Firmware Update Utility v4.33             |
|             Copyright (C)2009 American Megatrends Inc. All Rights Reserved. |
|                               |
|-----+-----|
- Boothlock checksum .... ok
- Module checksums ..... ok
- Erasing flash ..... done
- Writing flash ..... done
- Verifying flash ..... done
- Erasing NVRAM ..... done
- Writing NVRAM ..... done
- Verifying NVRAM ..... done
- ROM file Optimal CMOS defaults were loaded.
- Program ended normally.
```

6. Please restart your system after flashing BIOS completely
7. When you see the LOGO or hear one short beep, please press “Delete” to enter BIOS Setup Menu
8. Select “Load Default Setting” and press “Enter”
9. Select “OK” to load default setting

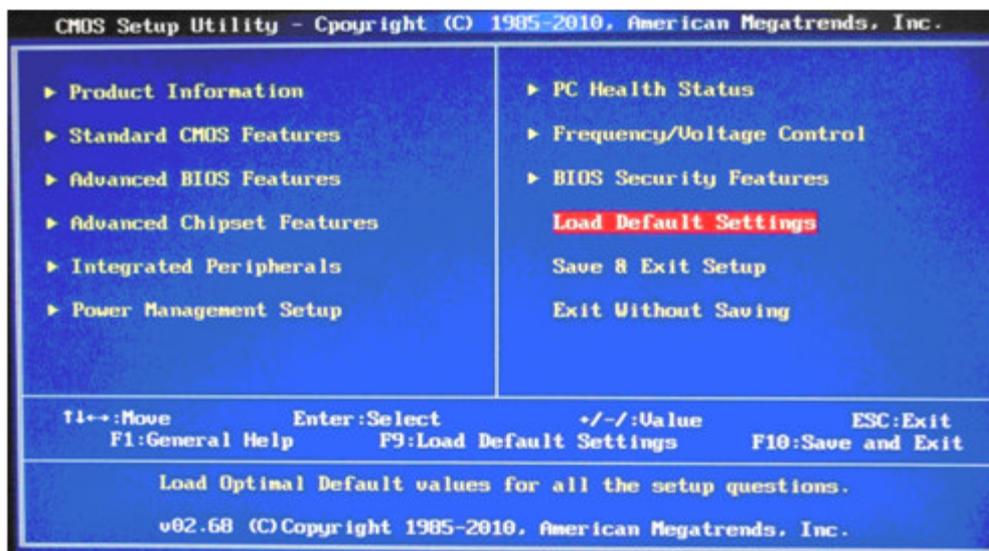

10. Select “Save & Exit Setup” and press “Enter”
11. Select “OK” to Restart

CMOS Setup Utility - Copyright (C) 1985-2010, American Megatrends, Inc.

- ▶ Product Information
- ▶ Standard CMOS Features
- ▶ Advanced BIOS Features
- ▶ Advanced Ch...
- ▶ Integrated
- ▶ Power Manag...

- ▶ PC Health Status
- ▶ Frequency/Voltage Control
- ▶ BIOS Security Features

Save configuration changes and exit setup?

[Ok]

[Cancel]

↑↓:Move Enter:Select +/-:Value ESC:Exit
F1:General Help F9:Load Default Settings F10:Save and Exit

Exit system setup with saving the changes.

v02.68 (C) Copyright 1985-2010, American Megatrends, Inc.